Hunter®

SETTING THE DATE AND TIME

- 1 Turn dial to the Date/Time position.
- YEAR: Press
 and
 to change the year.
 The controller displays currently propress
 to advance to MONTH.
 grammed active day schedule information.
- MONTH: Press
 and
 to change the month. Press
 to advance to DAY.
- ◆ DAY: Press and to change the date. Press ➤ to advance to TIME.
- TIME: Press and to select AM, PM or 24 HR. Press → to select hours. Press ■ and ■ to change the hour shown on the display. Press → to select minutes. Press ■ and ■ to change the minutes.

The date, day and time have now been set.

SETTING PROGRAM START TIME

NOTE: A single watering start time will start the program (A,B,C) and all stations assigned to the program will run sequentially.

- Turn dial to the **Start Times** position.
- Select program A, B or C by pressing PRO
- Press
 and
 to change the start time.

 Press
 to select the next start time.
- Press → to select the next start time, or or for the next program.

To eliminate a programmed start time: Press and are to set the start time to OFF (which is between 11:45 PM and midnight).

SETTING STATION RUN TIMES (WATERING DURATION)

- 1 Turn the dial to the Run Times position.
- 2 Select program A, B or C by pressing PRG.
- The display will show the station number and the program letter selected (A, B or C). The run time will be flashing.
- 4 Press ➡ and ➡ to change the run time.
- ⑤ Press → to advance to the next station.
- 6 Repeat steps 4 and 5 for each station.

SETTING DAYS TO WATER

- Turn the dial to the Water Days position.
- The controller displays currently programmed active day schedule information. This dial position provides four different water day options: water on specific days of the week, interval watering, or water on odd days or even days. Each program can only operate using one type of water day option.

SELECTING SPECIFIC DAYS OF THE WEEK TO WATER

- With the arrow cursor on a specific day (the cursor always starts with Monday), press ■ to activate a particular day of the week to water. Press ■ to cancel watering for that day. After pressing a button the cursor automatically advances to the next day. A • indicates a water day. A • icon indicates a no water day.
- Repeat step 1 until desired days have been selected.

Please refer to Owner's Manual for interval and odd or even day scheduling.

RAIN SENSOR BYPASS SWITCH

If a sensor is preventing system operation (or no sensor is installed and the switch is in the ACTIVE position), SENSOR OFF will be displayed. Move the switch to BYPASS and the rain sensor will be bypassed.

SEASONAL ADJUSTMENT

- Turn dial to the **Seasonal Adjust** position.
- Press and to change the seasonal adjustment from 5% to 300% in 5% increments. The station run times displayed will automatically be recalculated.

CLEARING CONTROLLER'S MEMORY/RESETTING CONTROLLER

If you feel that you have mis-programmed the controller, there is a process that will reset the memory to factory defaults and clear all data that has been entered into the controller.

- Hold down the PRG button.
- while holding down the button, press and release the reset button on the back of the front panel, wait until the display reads 12:00 AM, then release the button.
- **3** All the memory has been cleared and the controller may be reprogrammed.

MANUALLY OPERATING A SINGLE STATION

- Turn dial to the Manual position.
- Station run time will flash in the display. Press → to move to the desired station. Press → and → to set the watering duration.
- Turn the dial to the RUN position to run the station. (Station designated will water, then controller will return to automatic mode).

ONE TOUCH MANUAL START AND STATION ADVANCE

With the dial in the RUN position, press and hold ◆ until STATION 1 appears in the display. Release the arrow button to run all stations for their programmed run time (one touch).

To adjust run times prior to running all stations, press and hold the → until STATION 1 appears and then press ■ and ■ to select the run time and → to advance and adjust all programmed stations.

Feature	Where Found
TOTAL RUN TIME	Turn to Run Times Press ◀ from Station 1 to view
TEST PROGRAM	Hold PRG for 3 seconds
EASY RETRIEVE™	Press + and PRG to Save Press - and PRG to Restore
TOTAL RESET	Press PRG and RESET button
QUICK CHECK ™	Press + -, ∢, ▶ together Press + to begin check
RUN PROGRAM	Hold ▶, press PRG to select

© 2016 Hunter Industries Incorporated | hunterindustries.com

LIT-666-ICC2 US 8/16

ICC2 & PRO-C° FEATURE REMINDER Hunter°	
Feature	Where Found
PROGRAMMABLE SENSOR OVERRIDE	Hold =, turn to Start Times
CYCLE AND SOAK	Hold +, turn to Run Times Press PRG to set Soak
DELAY BETWEEN STATIONS	Hold •, turn to Run Times
HIDE PROGRAMS	Hold =, turn to Water Days
SOLAR SYNC DELAY	Hold +, turn to Solar Sync
CLIK DELAY	Hold +, turn to System Off