

HOA IRRIGATION SYSTEM

HOW TO PROVIDE WATER FOR PRESSURE WASHING

OPEN VALVE ON POST AND BOTH "T" VALVE SHUTOFFS.
MAKE SURE BYPASS HOSE IS ATTACHED TO ONE OF THE "T" VALVE OUTLETS AND
MOVE END OF HOSE OUTSIDE ENCLOSURE TO STREET

CHECK SYSTEM STATUS – IF OFF DUE TO RAIN MOVE RAIN SENSOR SWITCH FROM
ACTIVE TO BYPASS/OFF

ADVANCE DIAL TO RUN TIME
ADVANCE TO PROGRAM B USING PROG BUTTON
ADVANCE TO ZONE 6 USING ARROW BUTTON
SET ZONE 6 RUN TIME TO 2:30 OR MORE RUN TIME
RETURN DIAL TO OFF OR RUN POSITION
ATTACH PRESSURE WASH HOSE TO OTHER "T" OUTLET
WHEN READY TO START – TURN DIAL TO MANUAL START, ADVANCE TO ZONE 6
USING ARROW BUTTON, THEN TURN DIAL TO RUN
ADJUST BYPASS "T" VALVE TO KEEP PRESSURE < 90 PSI

WHEN DONE...TURN DIAL TO OFF TO STOP PUMP
CLOSE VALVE ON POST AND CLOSE BOTH "T" SHUTOFFS
PLACE HOSE END OUTSIDE ENCLOSURE BACK IN MIDDLE OF BUSHES
ADVANCE DIAL TO RUN TIME – MAKE SURE STILL ON PROGRAM B
SET ZONE 6 RUN TIME BACK TO 0:00 USING ARROW BUTTON
ADVANCE TO PROGRAM A USING PROG BUTTON
RESET RAIN SENSOR BYPASS SWITCH TO "ACTIVE" IF NECESSARY
RETURN DIAL TO RUN POSITION
CHECK OPERATION – MOVE DIAL TO MANUAL RUN THEN TO RUN – ZONE 1
SHOULD START
SHUT OFF – WAIT FOR PUMP TO STOP – THEN RETURN DIAL TO RUN
CLOSE TIMER DOOR FIRMLY – MAKE SURE IT SNAPS CLOSED
CLOSE AND LOCK ENCLOSURE GATE

JULY, 2020